





Road Angel Plus USB Driver Installation Instructions

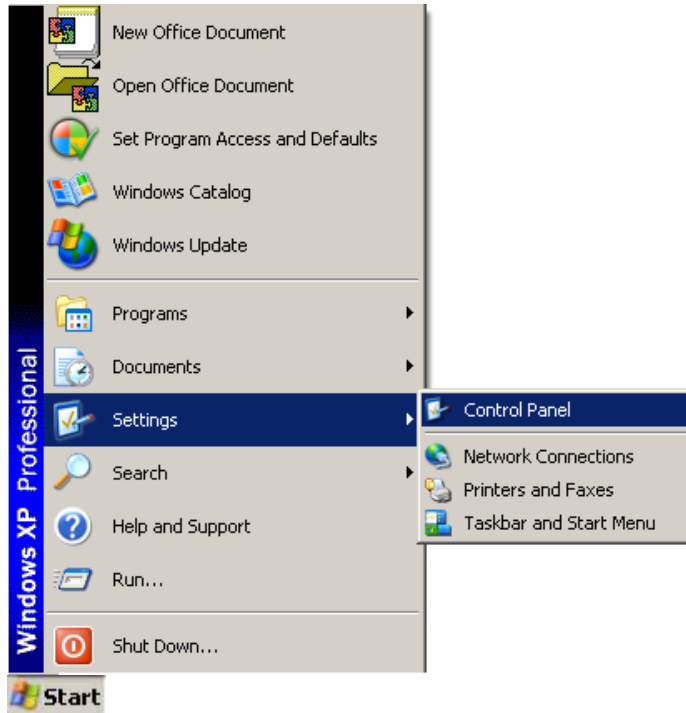



Click on the Start button, select Settings and then Control Panel

Double click on 'System'

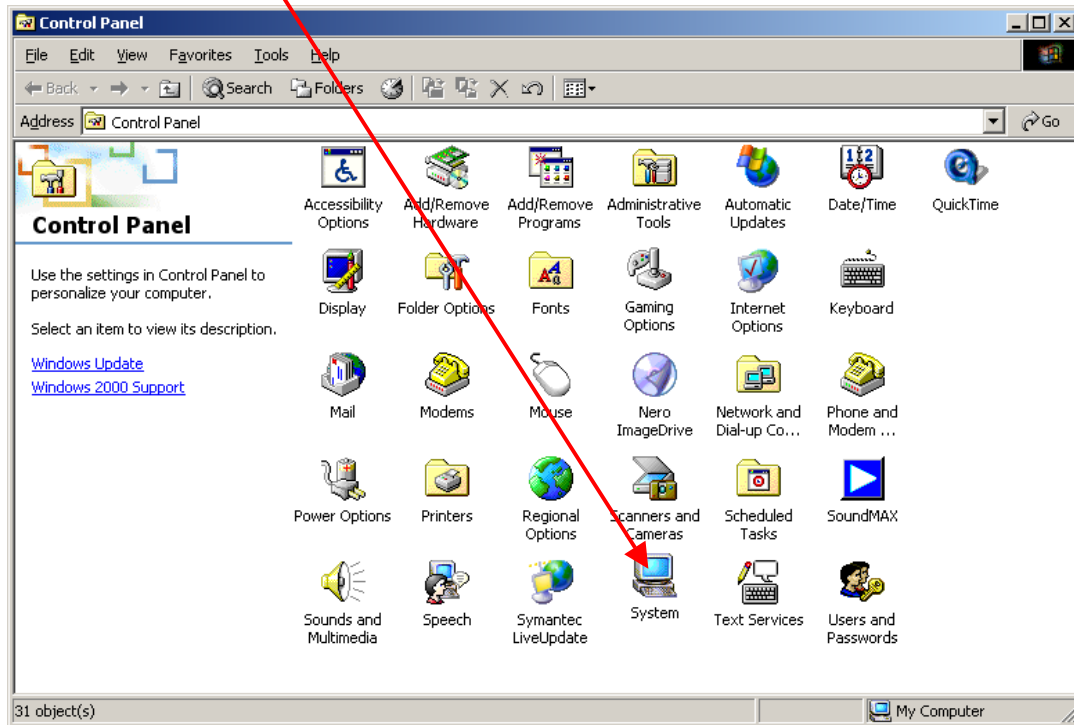


Select 'Hardware' and click on 'Device Manager'

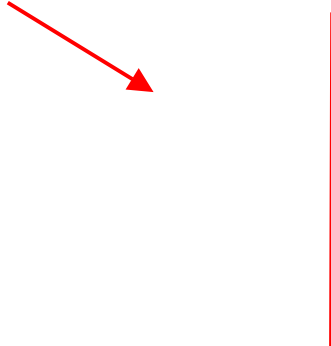

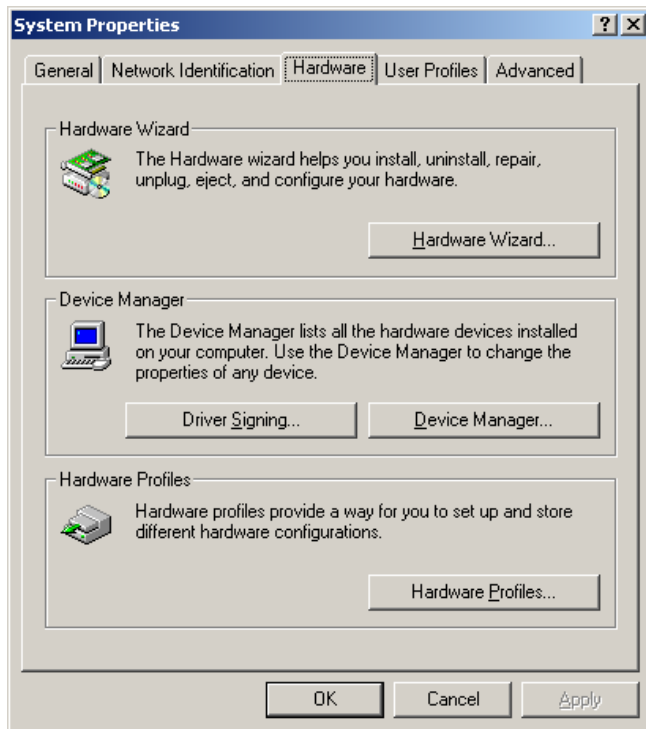


The following window will appear. You will see a USB Device entry with a yellow warning symbol either listed under Universal Serial Bus controllers or, as in this case, under Other devices.

Double click on the USB Device entry.

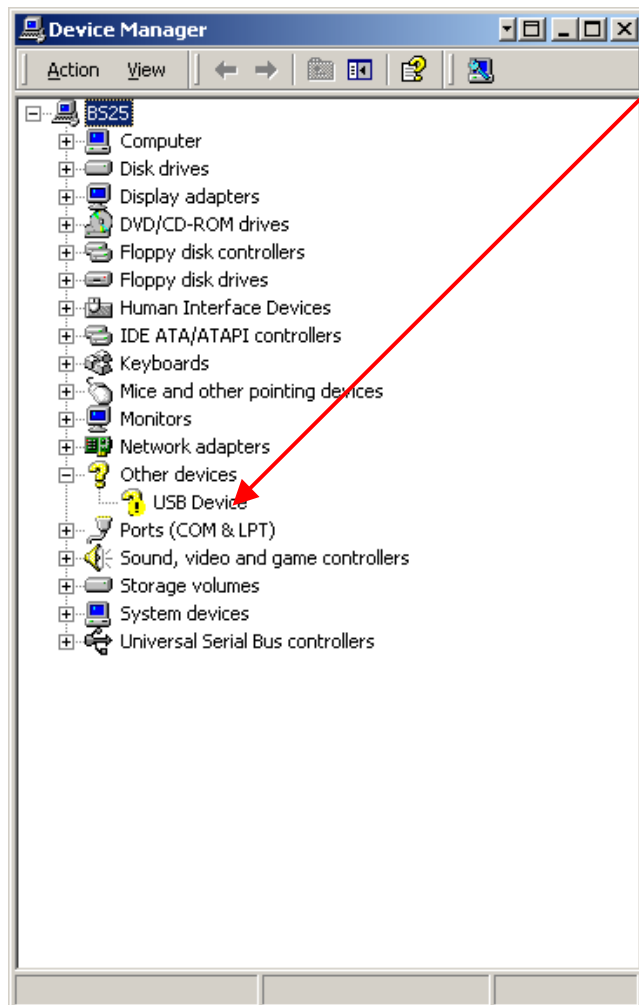


The following window will appear. Click on 'Reinstall Driver'




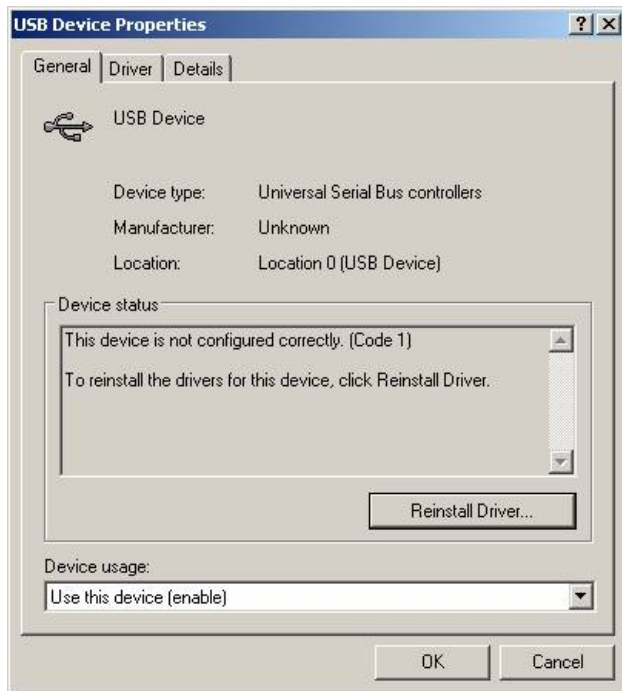

Click Next

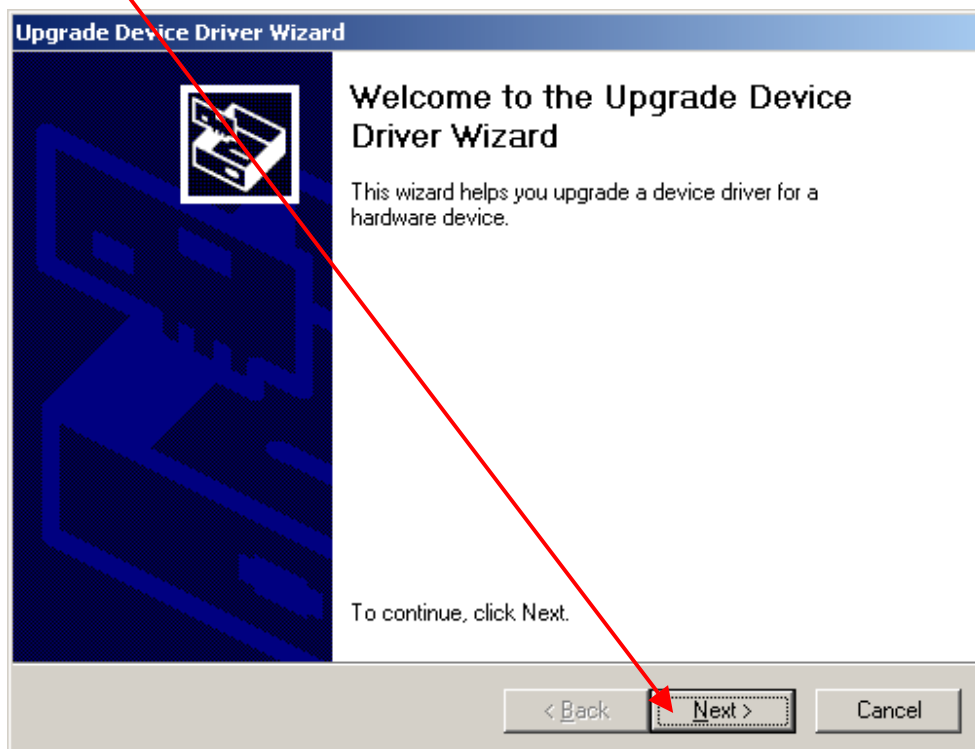


Select 'Install from a list....' and then click 'Next'

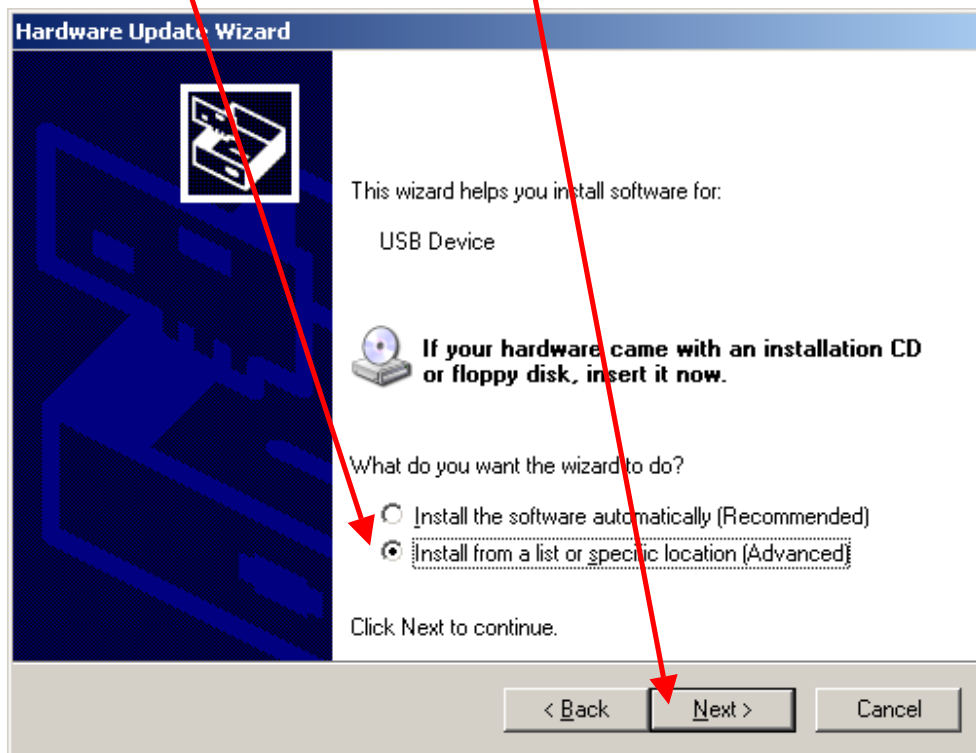


Select Search for a suitable driver for my device. Then click Next.




Ensure that the only option selected is 'Specify a location' click next

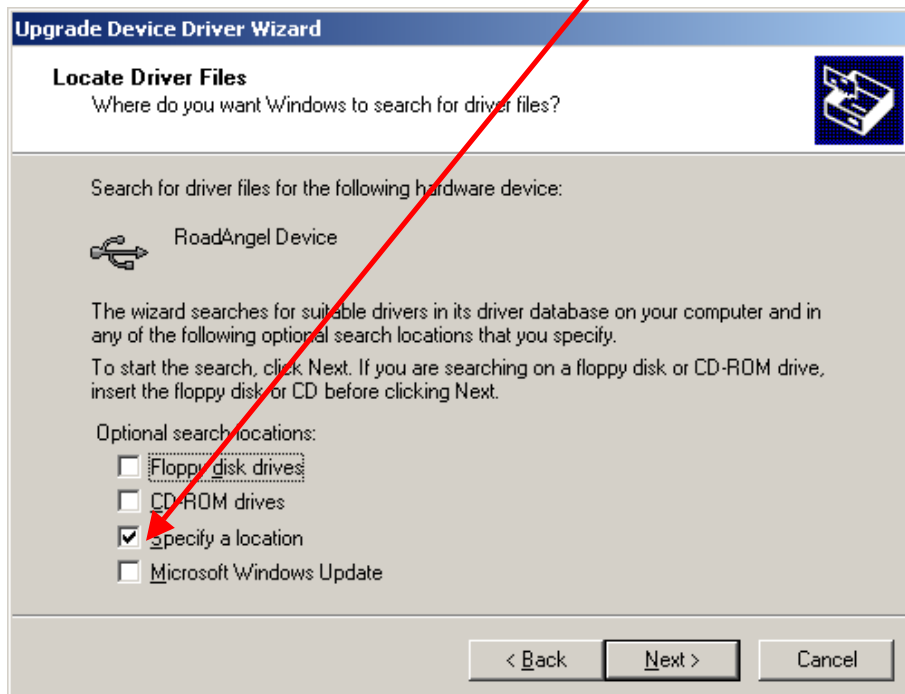


Then click Browse

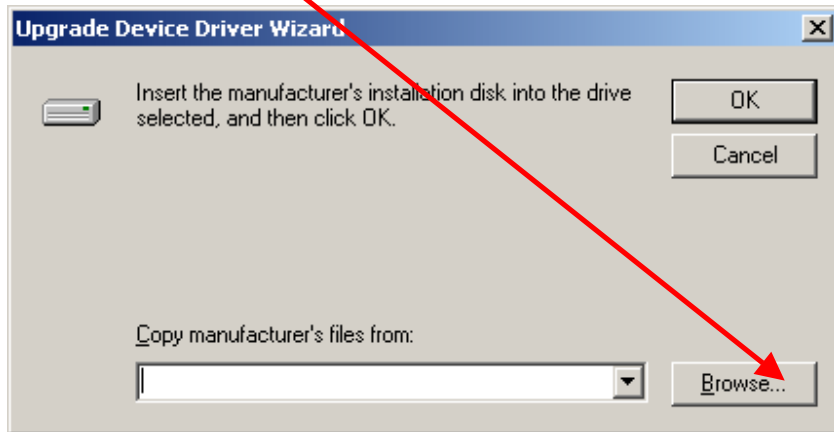


Click on My Computer, and then click on Local Disk (C:)

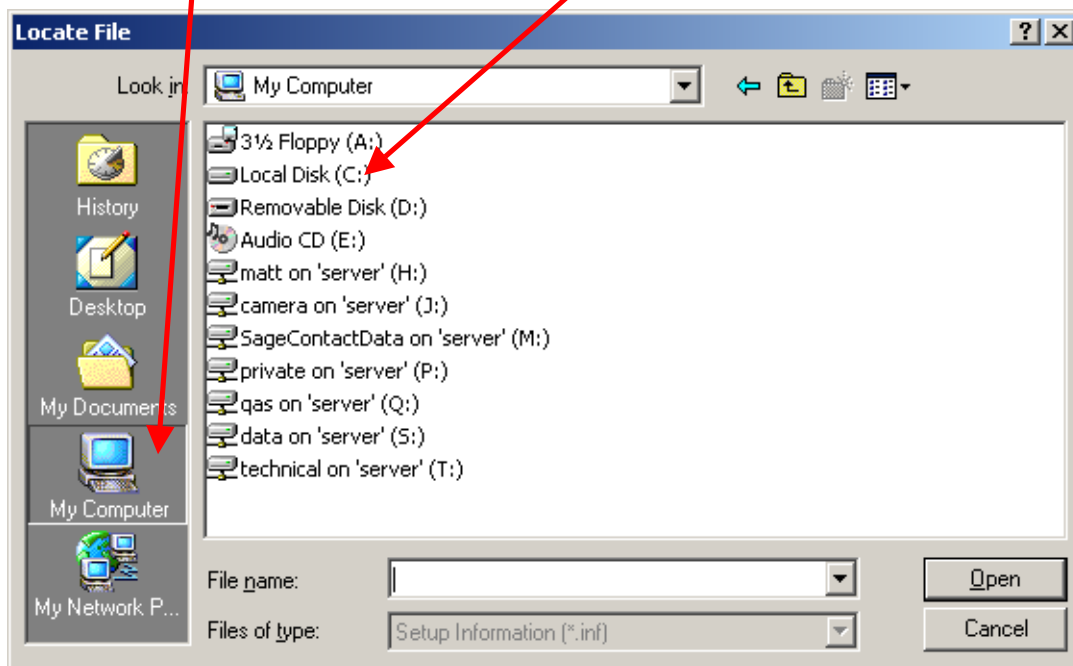


then click on Program Files

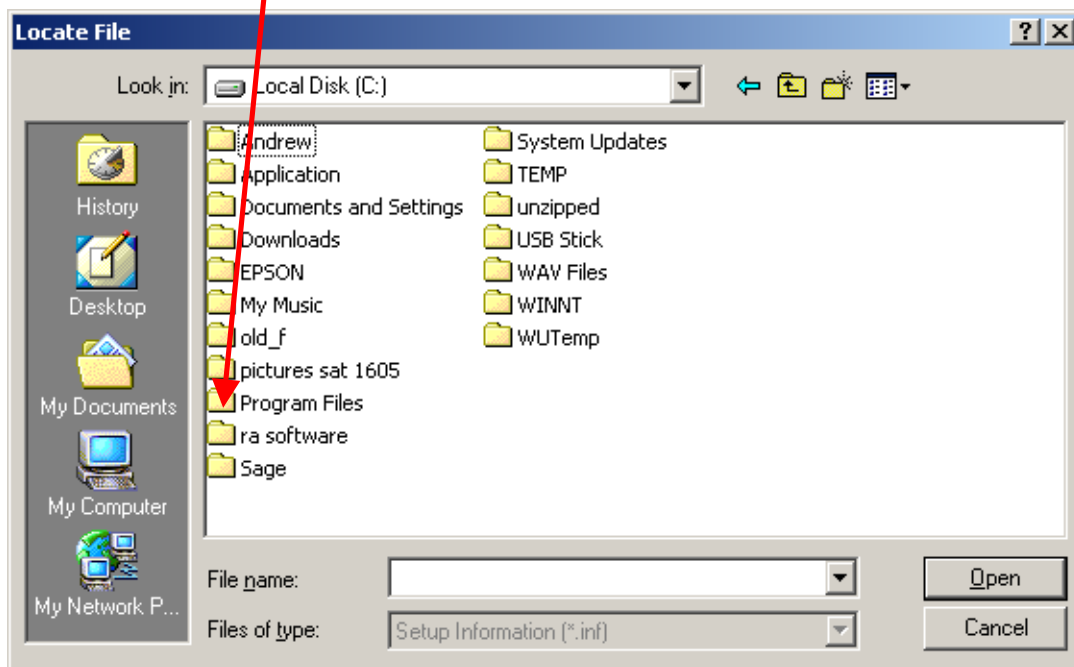


Click on Blackspot Interactive

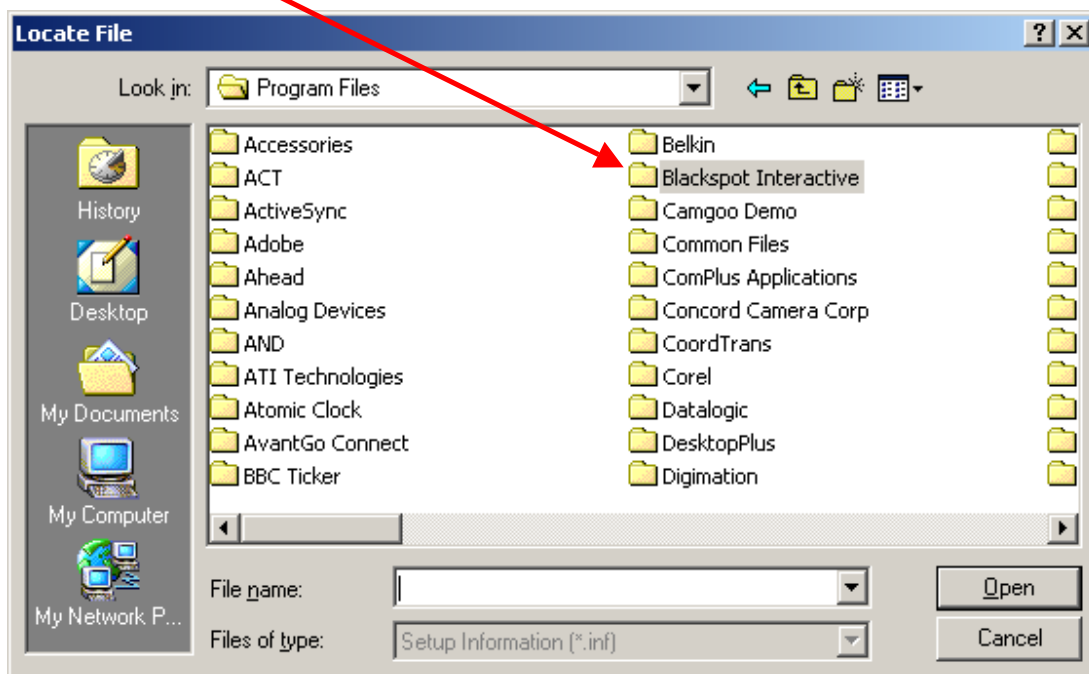


Click on RoadAngel Plus

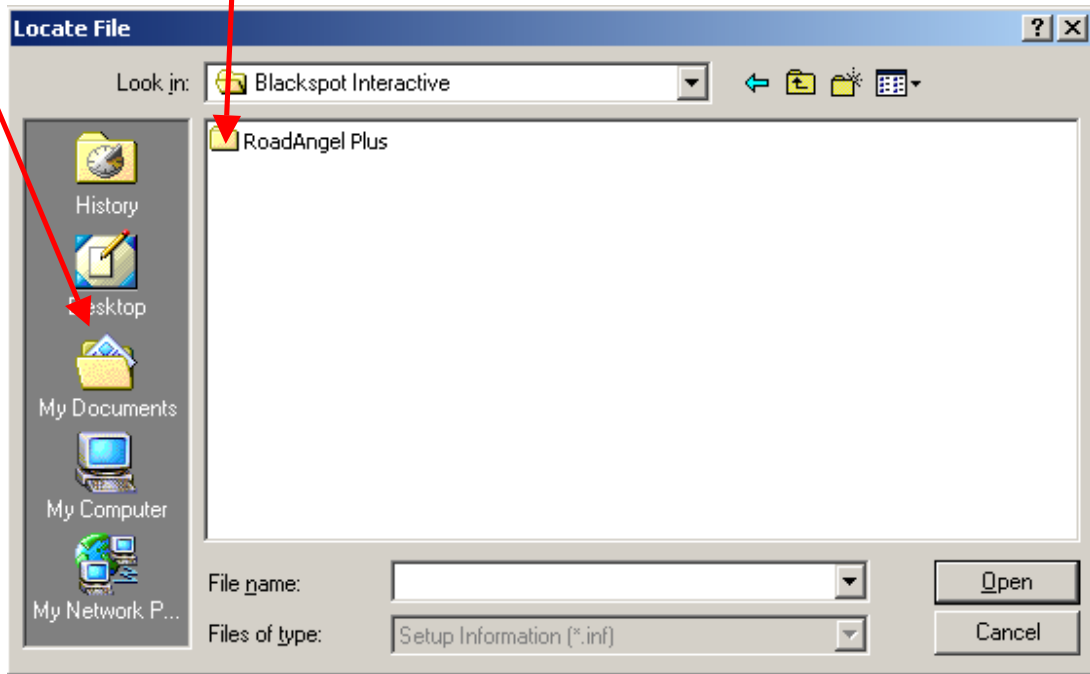

Click on USB Drivers and then select RA_PLUS. Then click Open

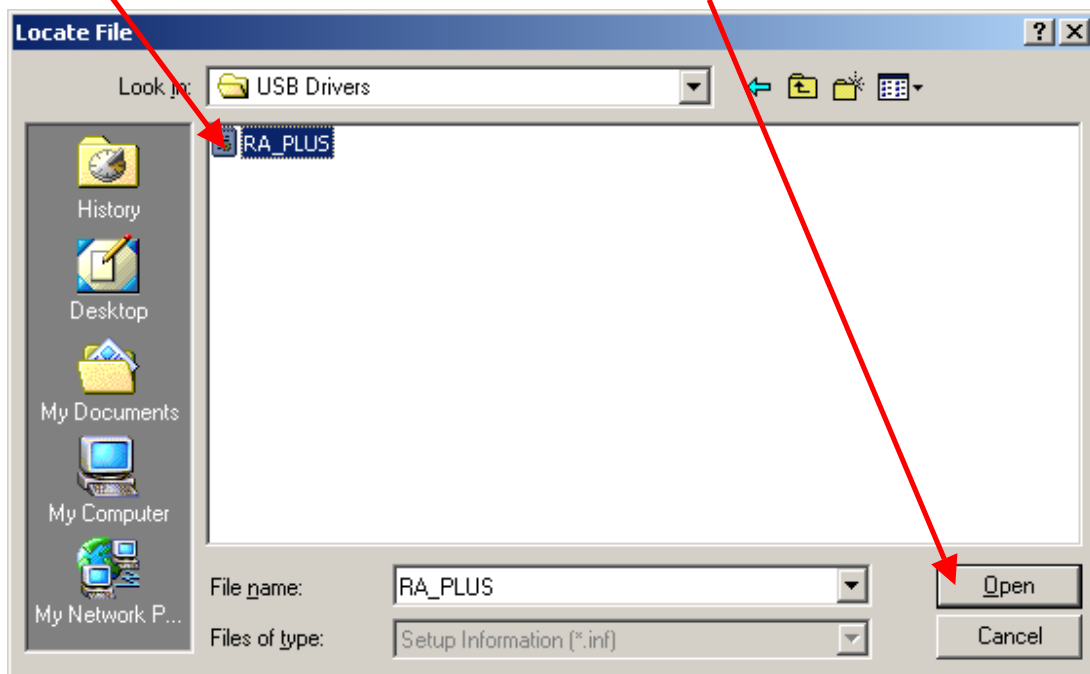

Then click OK

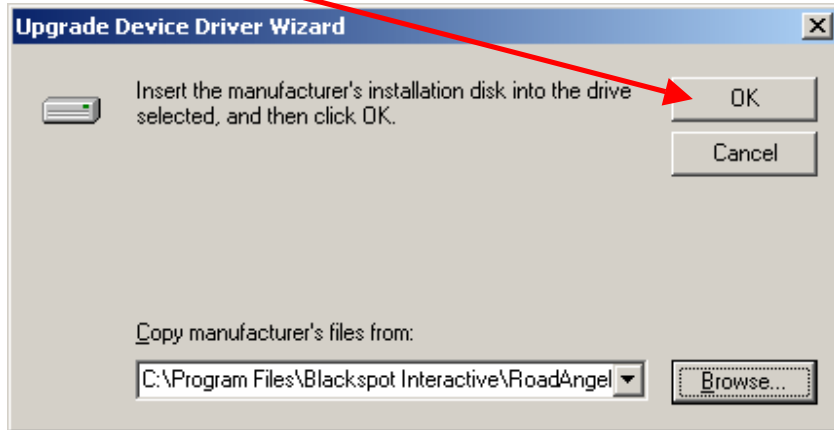

The PC will then search for the driver and install it automatically.

When the installation is complete the following window will appear. Click 'Finish' to close the window.



You can now update your Road Angel Plus

Locate the Road Angel Plus icon on your main desktop.



Double click on the Road Angel Plus icon and the following window will appear. **Ensure the Road Angel is connected to the PC via the USB port and is switched on. The screen will not be backlit and will say Connected to PC.**

Establish an internet connection, click on 'Synchronise' and the software will start to update the Road Angel Plus.



The blue bar will indicate the progress up the update. When it reaches 100% the Road Angel is up to date.