




## Road Angel Plus USB Driver Installation Instructions

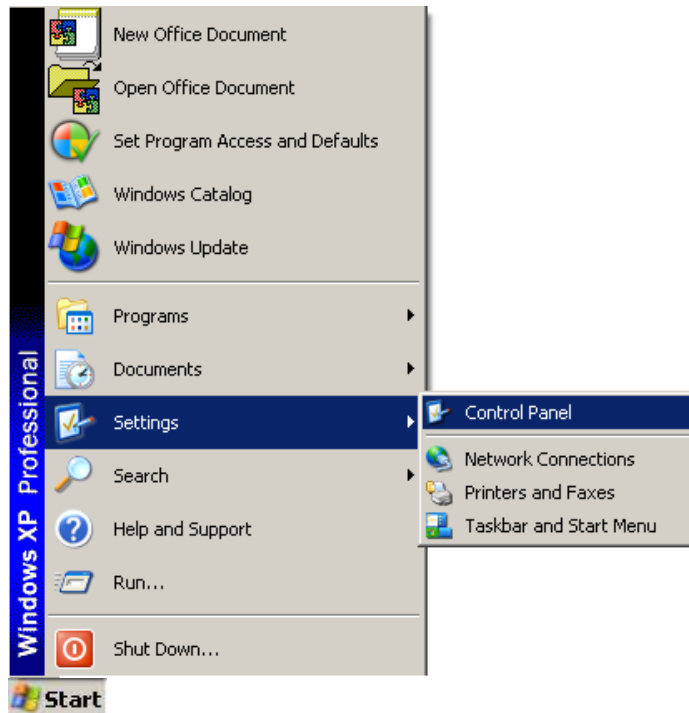

Click on the Start button, select Settings and then Control Panel


Double click on 'System'

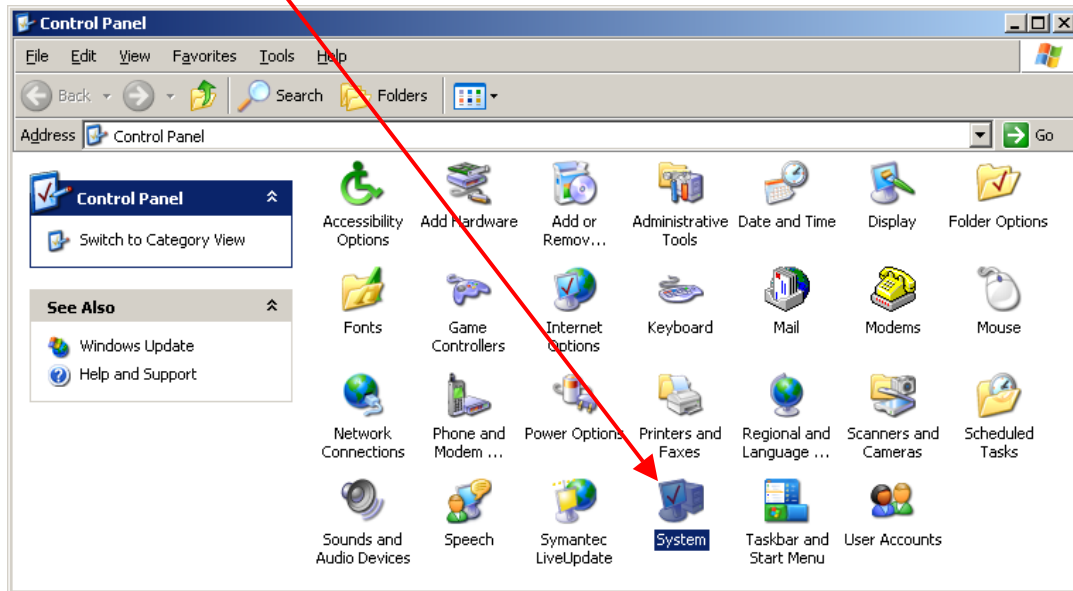


'If you cannot see System  it's possible they are in Category view.

System

Click here to change it to Classic view.

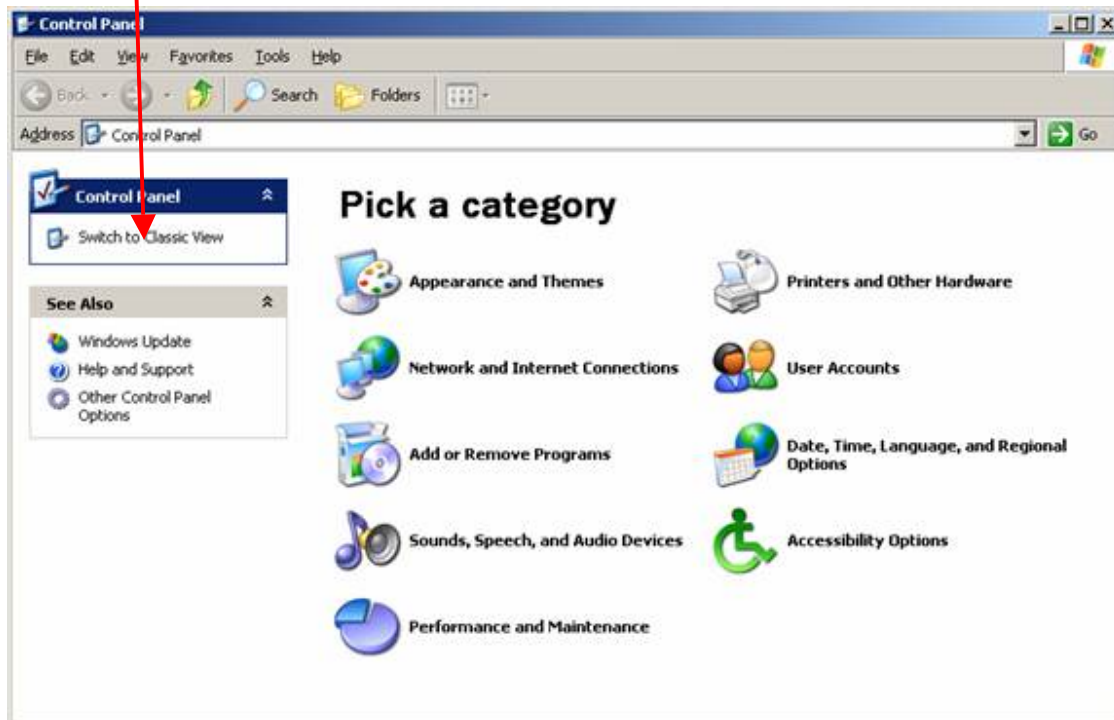


Select 'Hardware' and click on 'Device Manager'

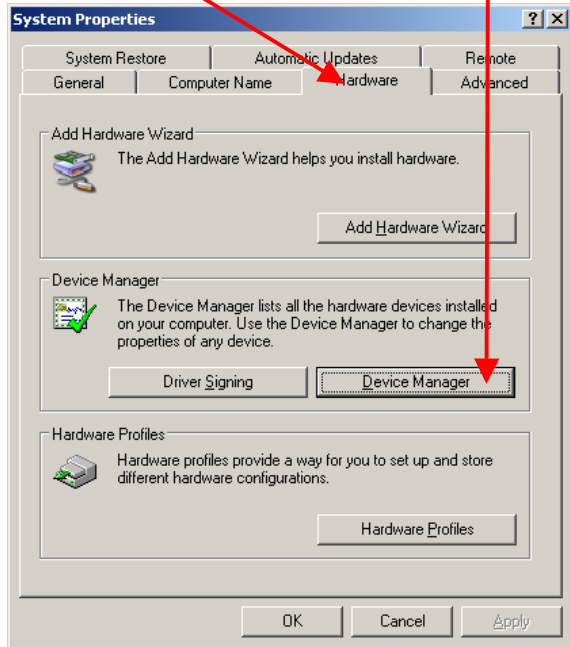


The following window will appear. You will see a USB Device entry with a yellow warning symbol either listed under Other devices or, as in this case, under Universal Serial Bus controllers.

Double click on the USB Device entry.

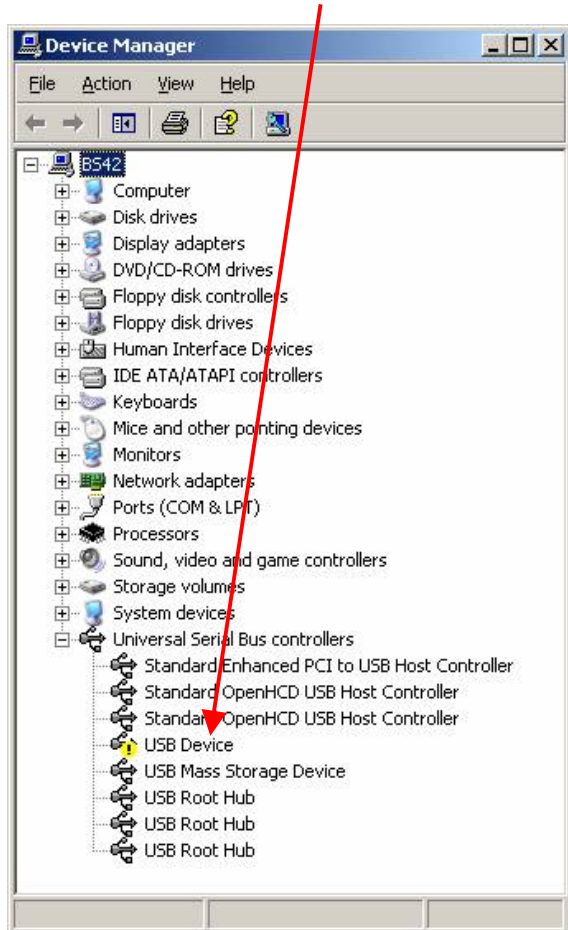


The following window will appear. Click on 'Reinstall Driver'

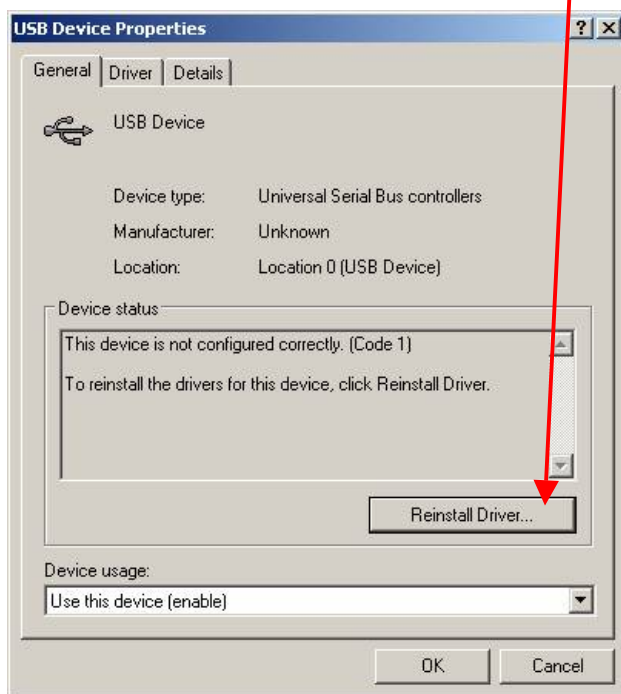


Select 'No, not this time'




Select 'Install from a list....' and then click 'Next'

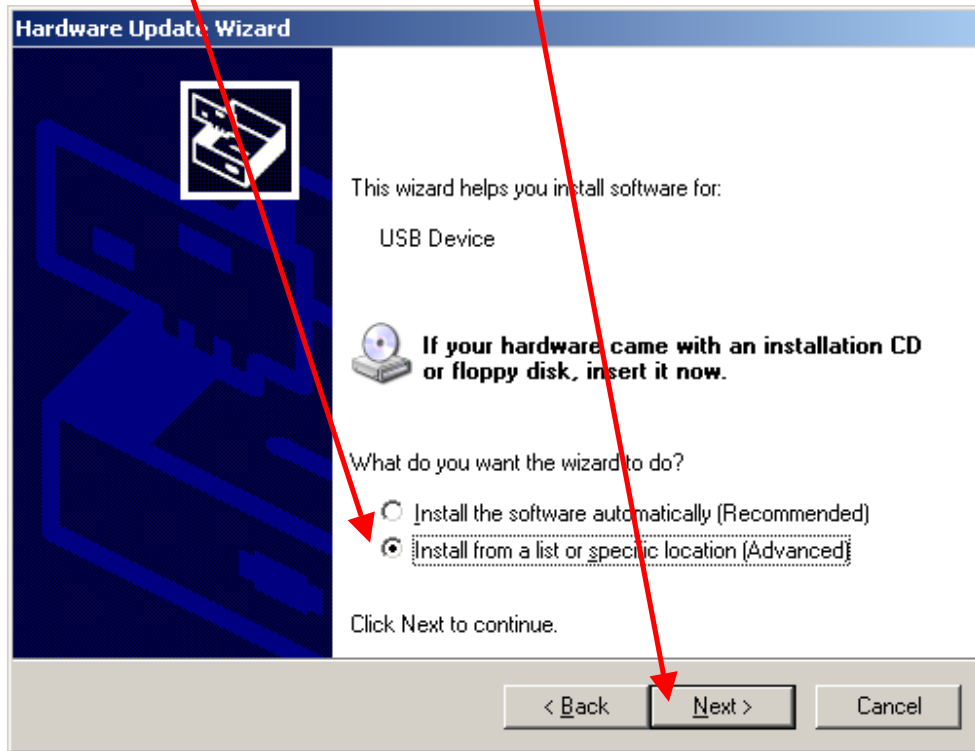

Un-check the 'Search removable...' make sure 'Include..' is checked. and using 'Browse' find the location of the drivers as shown, click 'Browse'

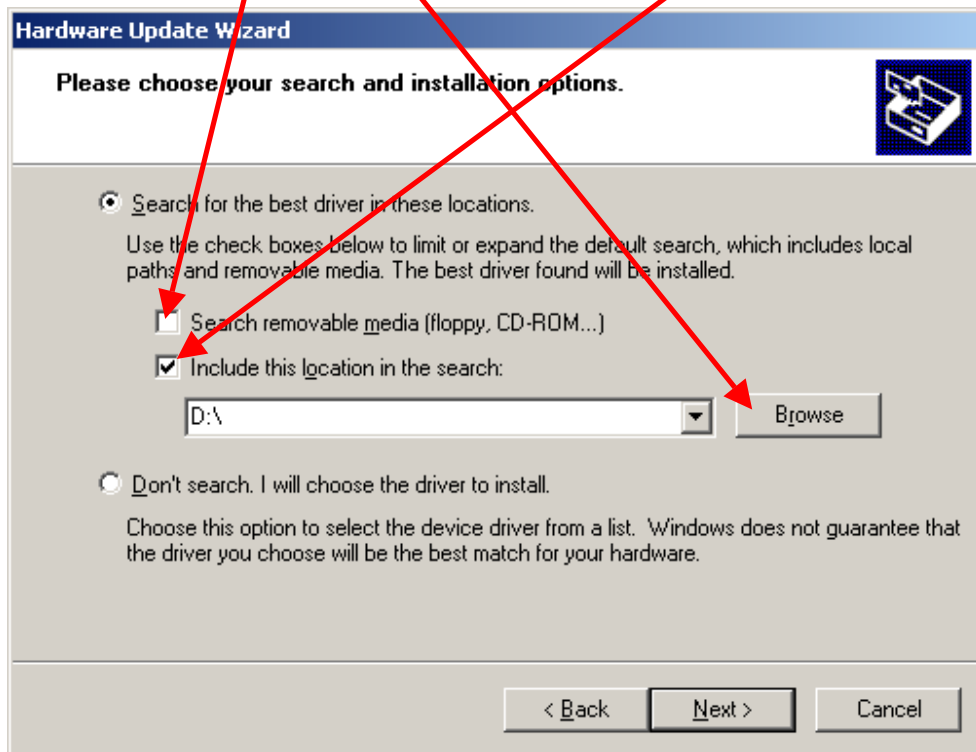

Click on 'My Computer'

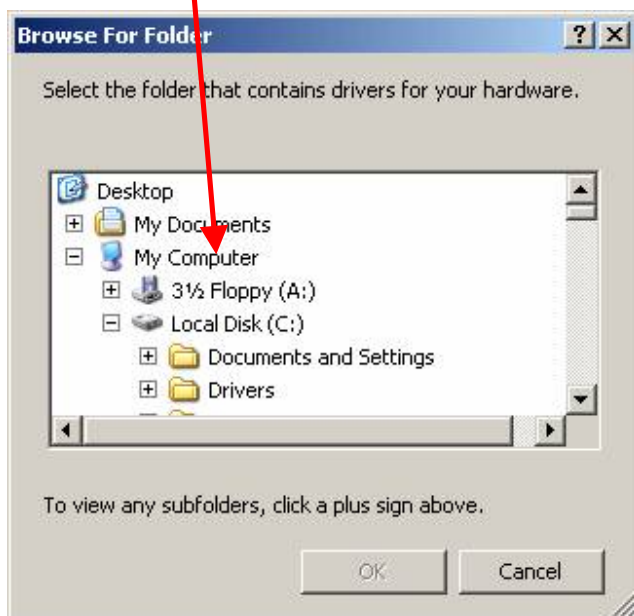

Click on Local Disk (C:)




Click on Program Files




Click on Blackspot Interactive




Click on RoadAngel Plus

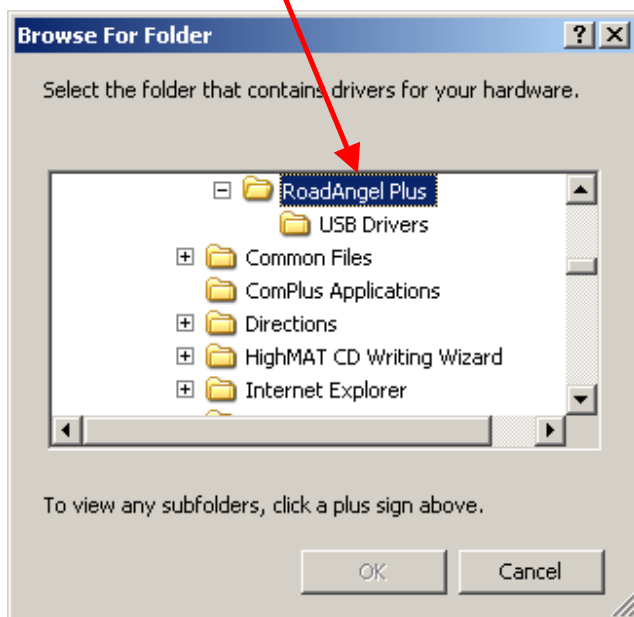


Click on USB Drivers, then click on OK

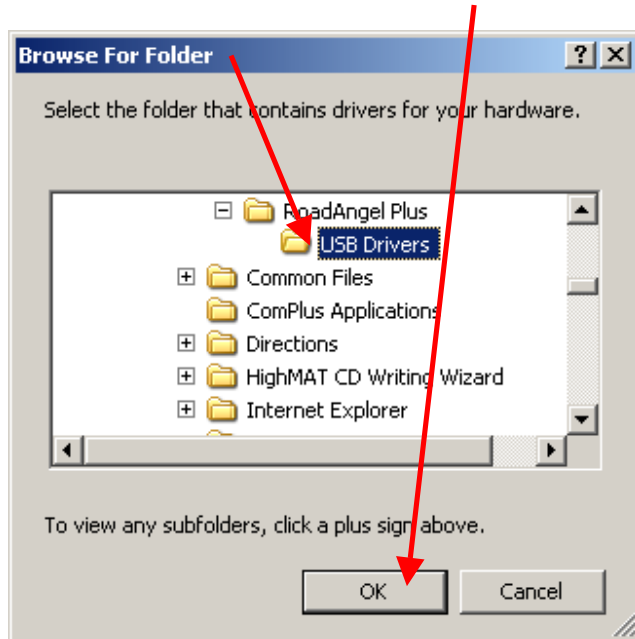


Click on 'Next'

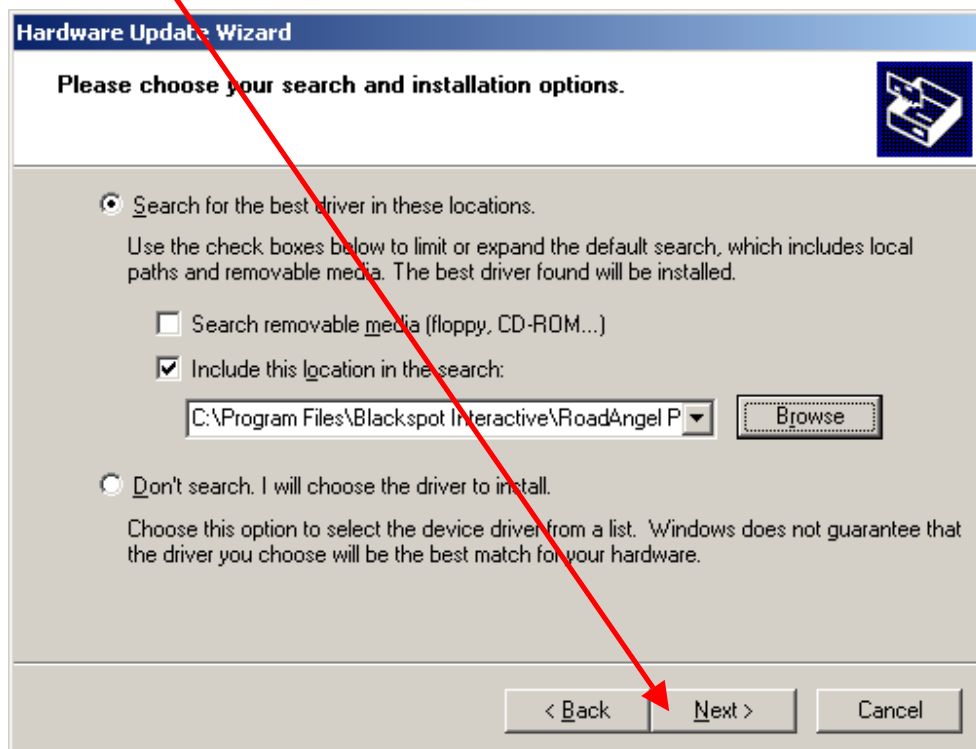

The software will then start to install.

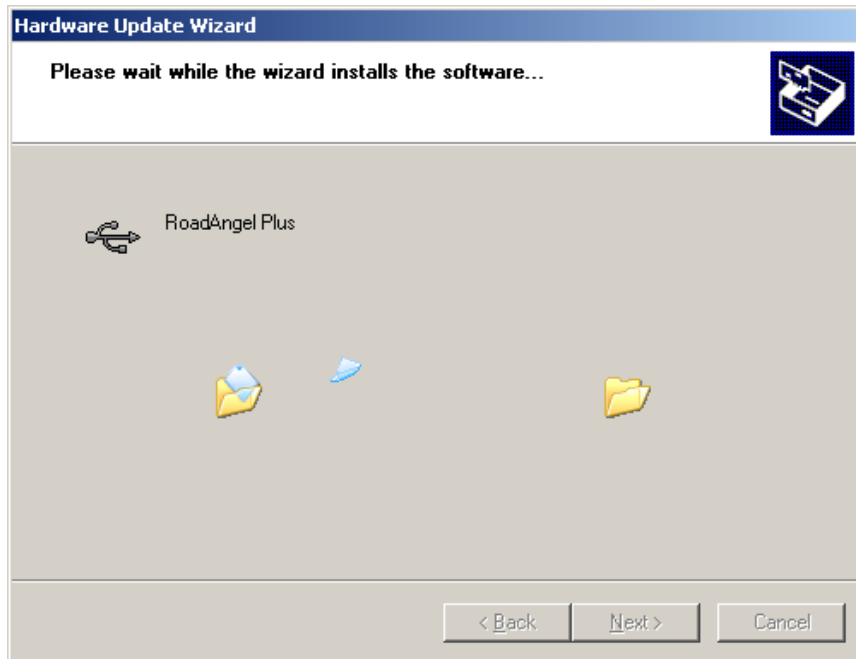

You may shortly see this window appear. Click on 'Continue Anyway'

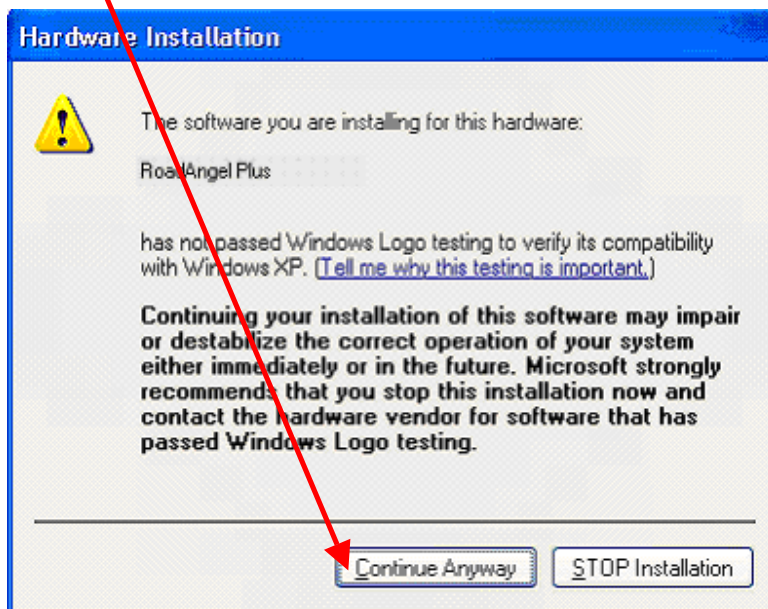

When the installation is complete the following window will appear. Click 'Finish' to close the window.



## You can now update your Road Angel Plus

Locate the Road Angel Plus icon on your main desktop.



Double click on the Road Angel Plus icon and the following window will appear. **Ensure the Road Angel is connected to the PC via the USB port and is switched on. The screen will not be backlit and will say Connected to PC.**

Establish an internet connection, click on 'Synchronise' and the software will start to update the Road Angel Plus.



The blue bar will indicate the progress up the update. When it reaches 100% the Road Angel is up to date.